

IBM 3490 and 3590 tape drives are shown in the diagram.

Fig. 1


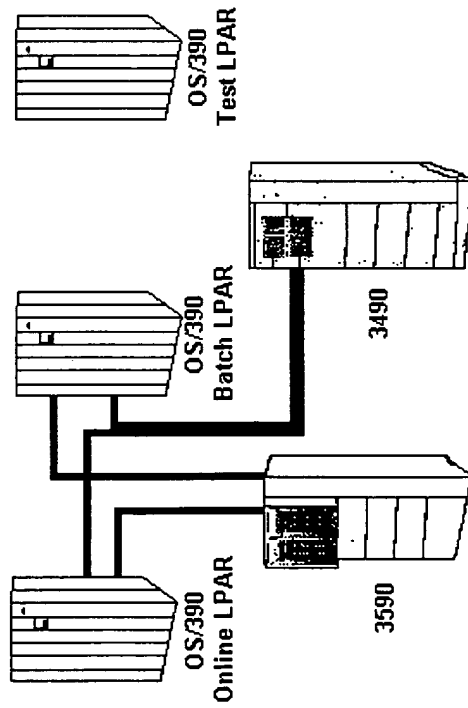


Fig. 2

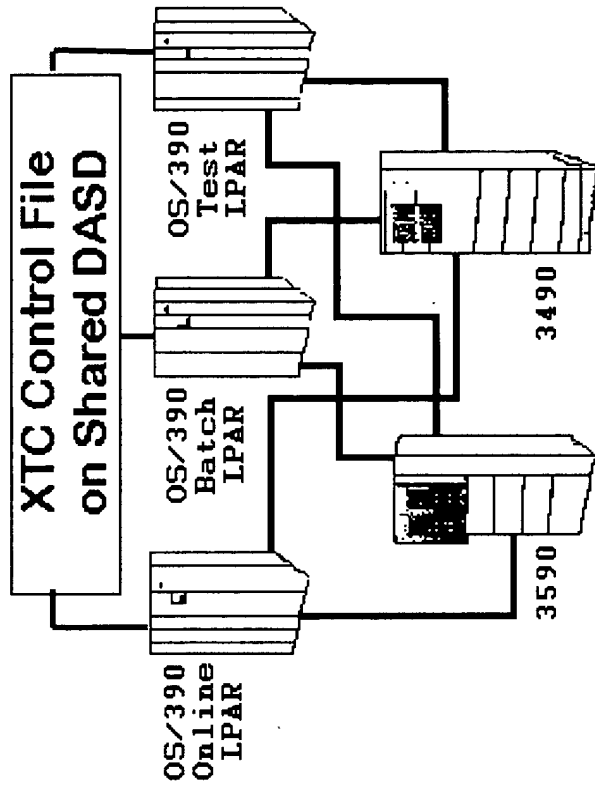

TCP/IP CONNECTIVITY

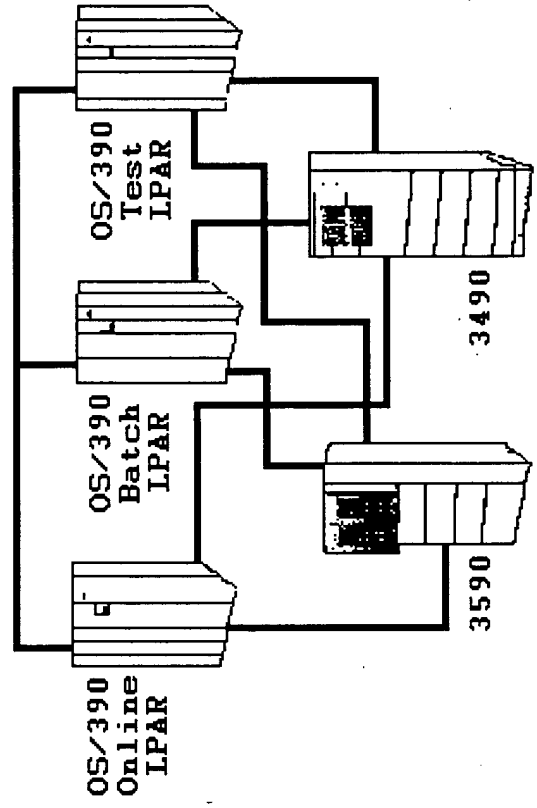


Fig. 3

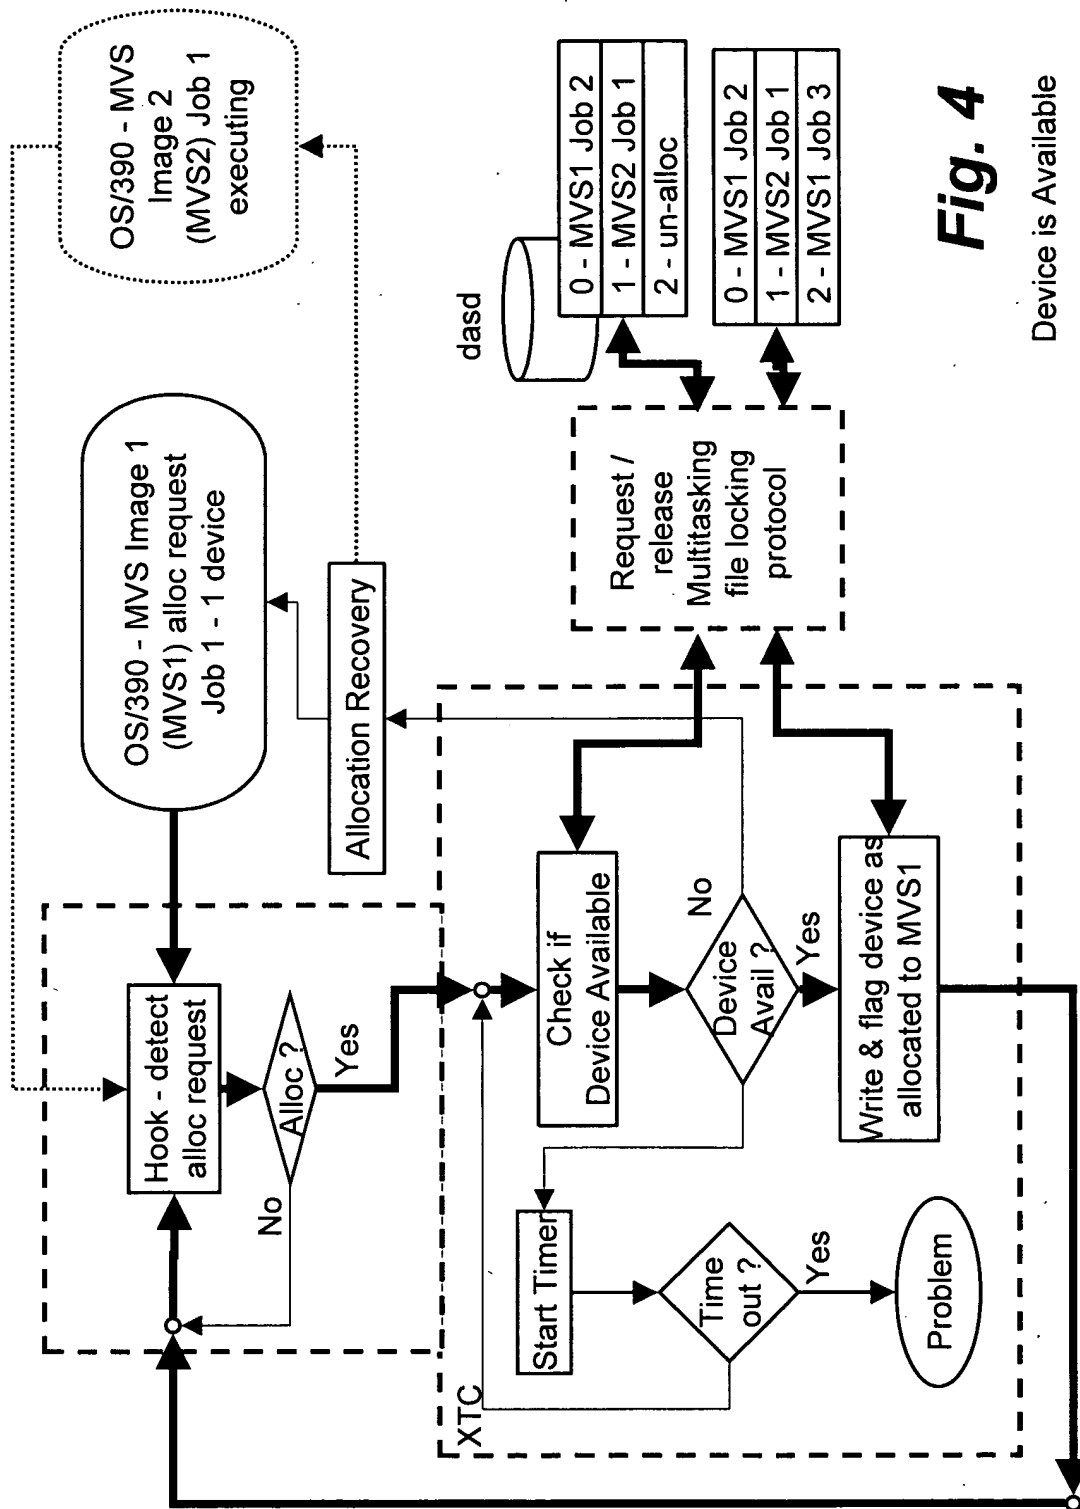


Fig. 4

Device is Available

IBM CORPORATION
 1964

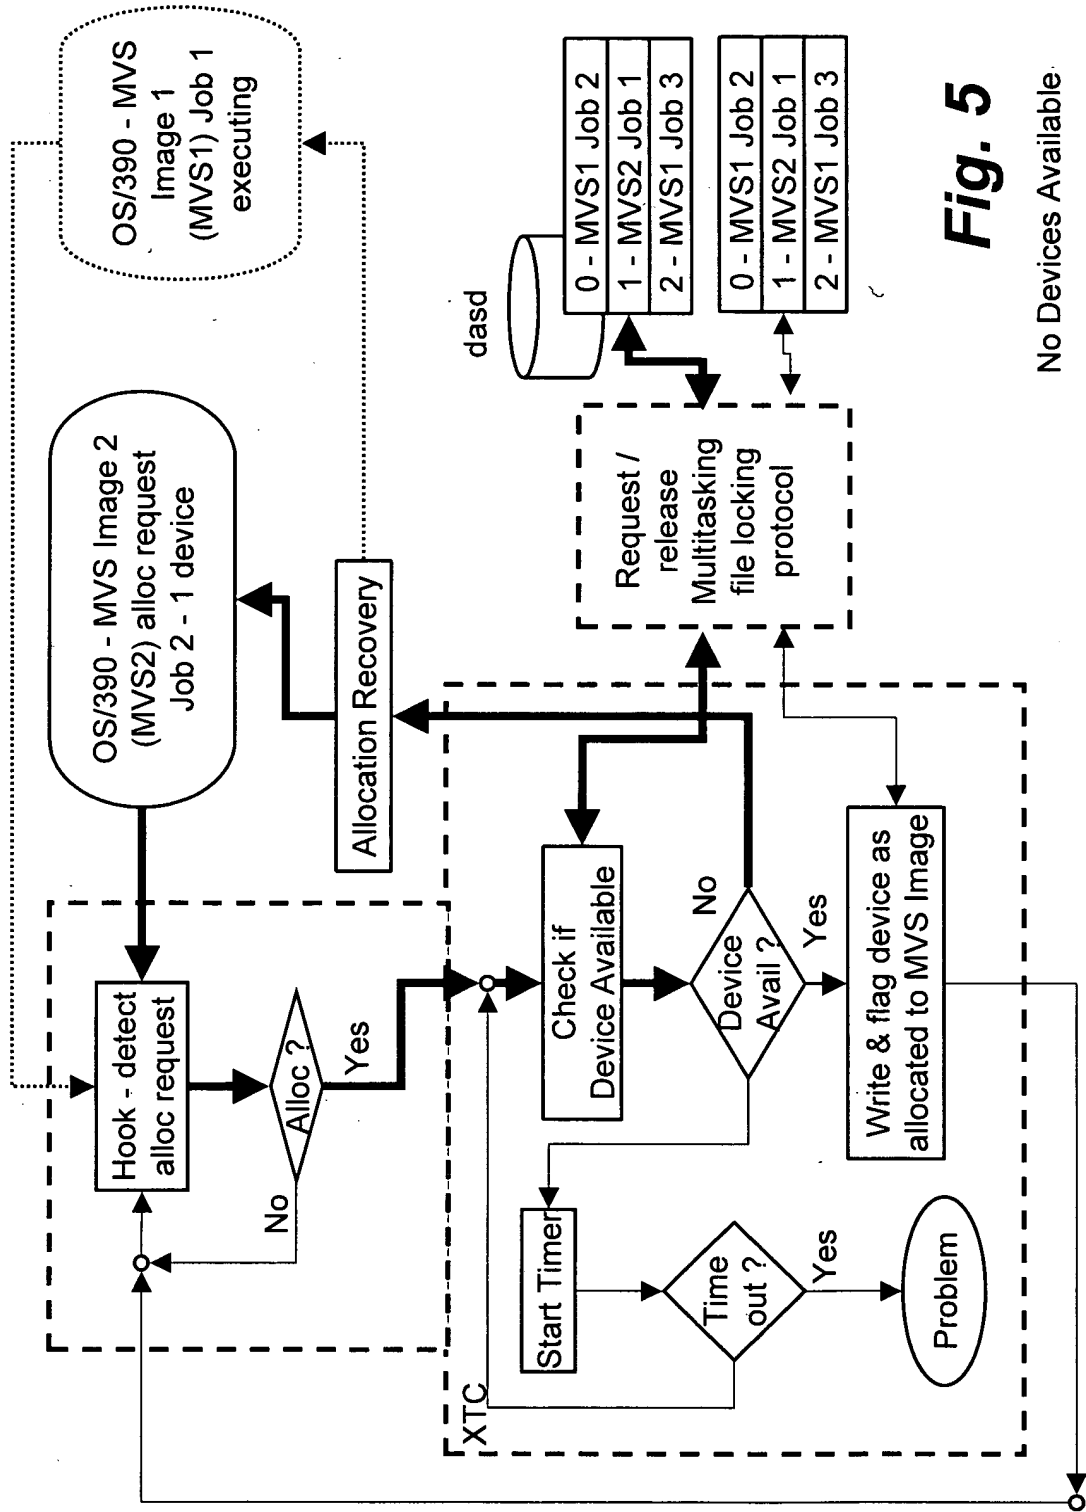


Fig. 5

No Devices Available.

Fig. 6

DISPLAY=UNITS or D=UNITS

>DISPLAY=UNITS

XTC0A05I - XTC UNIT STATUS 125

UNIT STATUS	JOBNAME	OWNING SYSTEM
-------------	---------	---------------

0380	ALLOCATED	TSSP2501 CUCB LOCAL
------	-----------	---------------------

0381	OFFLINE	
------	---------	--

0382	OFFLINE	
------	---------	--

0383	OFFLINE	
------	---------	--

DISPLAY=JOBS or D=JOBS

>DISPLAY=JOBS

XTC0A06I - XTC UNIT STATUS BY JOBNAME 127

JOBNAME	UNIT STATUS	OWNING SYSTEM
---------	-------------	---------------

TSSP2501	0380	ALLOCATED CUCB LOCAL
----------	------	----------------------

DISPLAY=SYSTEMS or D=SYSTEMS

>DISPLAY=SYSTEMS

XTC0A07I - XTC UNIT STATUS BY SYSTEM NAME 129

OWNING SYSTEM	JOBNAME	UNIT STATUS
---------------	---------	-------------

CUCB	LOCAL	TSSP2501 0380
		ALLOCATED

DISPLAY=XTCSTATUS or D=XTCSTATUS

>DISPLAY=XTCSTATUS

XTC0A10I - XTC SUBSYSTEM STATUS 131

SUBSYSTEM NAME: XTC2

XTC SSCVT ADDRESS: 00CD0040

XTC SSVT ADDRESS: 00FBB8F0

XTC COMMAND PREFIX CHARACTER: >

XTC CURRENT UNITLIMIT VALUE: 32

XTC CURRENT 3420LIMIT VALUE: UNLIMITED

XTC CURRENT 3480LIMIT VALUE: UNLIMITED

XTC CURRENT 3490LIMIT VALUE: UNLIMITED

XTC CURRENT 3590LIMIT VALUE: UNLIMITED

FUNCTION CODE 04 ROUTINE (XTCSS004): 851F16E8

FUNCTION CODE 08 ROUTINE (XTCSS008): 851EF6F0

FUNCTION CODE 09 ROUTINE (XTCSS009): 851EE280

FUNCTION CODE 10 ROUTINE (XTCSS010): 8539E288

FUNCTION CODE 14 ROUTINE (XTCSS014): 8539D660

FUNCTION CODE 78 ROUTINE (XTCSS078): 8539A708

ENF LISTENER EXIT 32 (XTCENF32): 8539A008